

NOTE: THIS TACH TEMPLATE RESEMBLES ORIGINAL CUTTING DIMENSIONS. YOU WILL NEED TO REMOVE A PORTION OF THE UNDER HOOD BRACING AT THE DRIVERS SIDE REAR OF HOOD. (SEE IMAGE)

CAUTION: HOOD TACH STUD LOCATION MAY VARY. BEFORE DRILLING ANY HOLES COMPARE DIMENSIONS TO THE TACH YOU WILL BE USING. FOR APPLICATIONS REQUIRING THE USE OF A FORWARD RIVET MEASUREMENTS MUST BE TAKEN FROM THE TACH BEING INSTALLED.




AMES
Performance Engineering

Po Box 572 - 10 Pontiac Dr. - Spofford, NH 03462
(800)421-2637 - Fax: (603)363-7007



TEMPLATE FOR LOGAN HOOD TACH

68-70 A-BODY

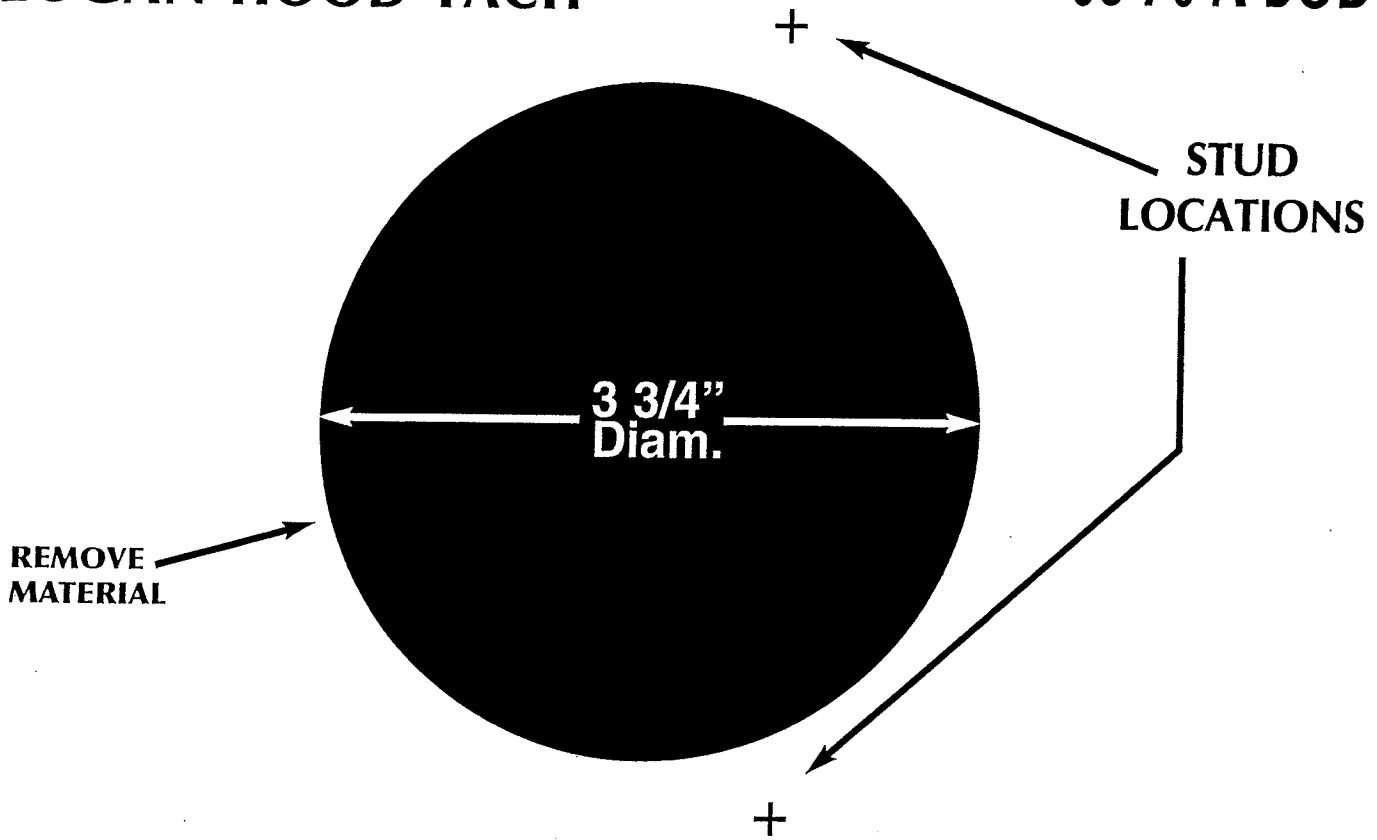

Carefully attach the template to the hood with tape in the indicated position (2 Inches from the driver's side of the hood and 12 Inches forward of the rear corner). Mark and carefully remove metal from the darkened areas.

OUTSIDE EDGE OF THIS SHEET IS THE BORDER

